Register your product and get support at

www.philips.com/welcome

HTS5560
HTS5580
HTS5590

PHILIPS

Contents

1 Notice 2
Copyright 2
Compliance 2
Mains fuse (UK only) 2
Open Source Software 2
Trademarks 2

2 Important 4
Safety 4
Product care 4
Disposal of your old product and batteries 5

3 Your home theatre 5
Main unit 5
Remote control 6

4 Connect your home theatre 7
Connectors 7
Connect to the TV 8
Connect audio from TV or other devices 9
Connect a wireless module 9
Connect to a computer network and the Internet 10

5 Use your home theatre 11
Before you start 11
Access the home menu 11
Choose your sound 11
Play a disc 12
Use Bonus View on Blu-ray 13
Access BD-Live on Blu-ray 13
Play from a USB storage device 13
More play features for disc or USB 14
Play from PC (DLNA Network Link) 15
Play from radio 15
Play audio from TV or other devices 16
Play from an MP3 player 16
Play from an iPod or iPhone 16
Use Philips EasyLink 17

6 Change settings 17
Access the setup menu 17
Change video settings 17
Change audio settings 18
Set up network 18
Set up EasyLink 18
Change preference settings 19
Change advanced settings 19

7 Update software 20
Check software version 20
Update software from the network 20
Update software from a USB device 20

8 Product specifications 21

9 Troubleshooting 22

10 Index 24

English

1 Notice

Copyright

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Copyright in the UK

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers' Protection Acts 1958 to 1972.

Compliance

CE

This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage) and 2004/108/EC (EMC).

Mains fuse (UK only)

This product is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

1 Remove fuse cover and fuse.
2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
3 Refit the fuse cover.

Note

- To conform to the EMC directive (2004/108/EC), the mains plug on this product must not be detached from the mains cord.

Open Source Software

Your product contains open source software. Philips hereby offers to deliver or make available, upon request, for a charge no more than the cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code on a medium customarily used for software interchange. This offer is valid for a period of 3 years after the date of purchase of this product.

To obtain the source code, write to:

Program Manager - Home Audio BU AVM
Innovation Site Singapore
Philips Electronics Singapore Pte Ltd
620A, Lorong 1 Toa Payoh,
Singapore 319762

Trademarks

BD LIVE

BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of the Blu-ray Disc Association.

Java POWERED

Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.

AVCHD™

'AVCHD' and the 'AVCHD' logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.

x.v.Colour

'x.v.Colour' is a trademark of Sony Corporation.

DLNA®, the DLNA logo and DLNA 1.0 Certified are trademarks, service marks or certification marks of the Digital Living Network Alliance.
(For HTS5580 and HTS5590 only.)

Manufactured under licence under U.S. Patent #s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, and DTS-HD, DTS-HD Master Audio | Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

Manufactured under licence from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

DivX® and DivX Ultra® are registered trademarks of DivX, Inc. and are used under licence.

DivX Ultra® Certified to play DivX® video with advanced features and premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified ® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.

LASER RADIATION
DO NOT VIEW DIRECTLY
WITH OPTICAL INSTRUMENTS
CLASS 1M LASER PRODUCT

2 Important

Read and understand all instructions before you use your home theatre. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power socket immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power socket before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power socket, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power socket if the voltage is different.

Risk of injury or damage to the home theatre!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power socket.
- Visible and invisible laser radiation when open. Avoid exposure to the beam.
- Do not touch the disc optical lens inside the disc compartment.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances; they should be disposed of properly.

Product care

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfibre cloth to clean the product.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3 Your home theatre

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theatre at www.philips.com/welcome.

Main unit

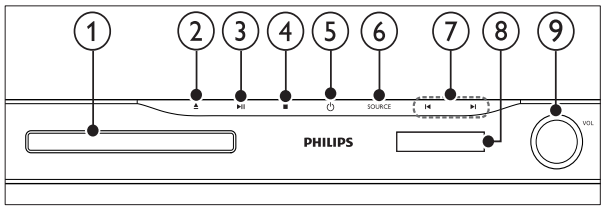

1. **Disc compartment**
2. **▲ (Open/Close)**
   Opens or closes the disc compartment.
3. **▶II (Play/Pause)**
   Starts, pauses or resumes play.
4. **■ (Stop)**
   - Stops play.
   - In radio mode, erases the current preset radio station.
5. **⏻ (Standby-On)**
   Switches the home theatre on or to standby.
6. **SOURCE**
   Selects an audio/video source for the home theatre.
7. **⏮ / ⏭**
   - Skips to the previous or next track, chapter or file.
   - In radio mode, selects a preset radio station.
8. **Display panel**
9. **Volume control wheel**

Remote control

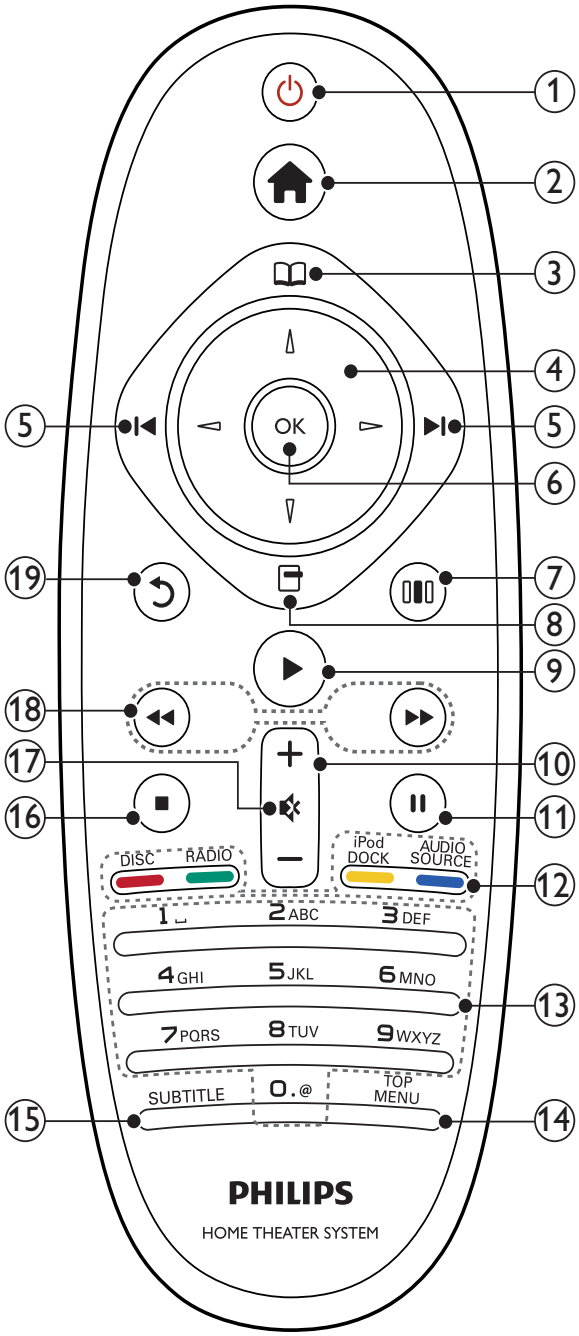

1. **(Standby-On)**
   - Switches the home theatre on or to standby.
   - When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

2. **(Home)**
   Accesses the home menu.

3. **(Disc menu)**
   Accesses or exits the disc menu.

4. **Navigation buttons**
   - Navigates menus.
   - In radio mode, press left or right to start auto search.

5. **/ (Previous/Next)**
   - Skips to the previous or next track, chapter or file.
   - In radio mode, selects a preset radio station.

6. **OK**
   Confirms an entry or selection.

7. **(Sound options)**
   Accesses or exits various sound options.

8. **(Options)**
   - Accesses more play options during playback.
   - In radio mode, programmes radio stations.

9. **(Play)**
   Starts or resumes play.

10. **+/- (Volume)**
    Increases or decreases volume.

11. **(Pause)**
    Pauses play.

12. **Source buttons / Colour buttons**
    - Blu-ray discs: Selects tasks or options.
    - **AUDIO SOURCE**: Selects an audio input source.
    - **DOCK for iPod**: Switches to Philips Dock for iPod/iPhone.
    - **RADIO**: Switches to FM radio.
    - **DISC**: Switches to disc source.

13. **Alphanumeric buttons**
    Enters values or letters (using SMS-style entry).

14. **TOP MENU**
    Accesses the main menu of a video disc.

15. **SUBTITLE**
    Selects subtitle language for video.

16. **(Stop)**
    - Stops play.
    - In radio mode, erases the current preset radio station.

⑰ (Mute)
Mutes or restores volume.

⑱ ◀◀ / ▶▶ (Fast Backward/Fast Forward)
Fast backwards or fast forwards. Press repeatedly to change the search speed.

⑲ ↩ (Back)
Returns to a previous menu screen.

4 Connect your home theatre

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theatre with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see www.connectivityguide.philips.com.

Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the socket.

Connectors

Front connectors

① MP3 LINK
Audio input from an MP3 player.

② ⇢ (USB)
Audio, video or picture input from a USB storage device.

Back connectors

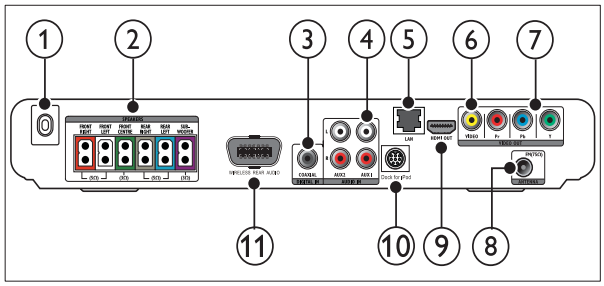

① AC MAINS~
Connects to the power supply.

② SPEAKERS
Connects to the supplied speakers and subwoofer.

③ DIGITAL IN-COAXIAL
Connects to the coaxial audio output on the TV or a digital device.

④ AUDIO IN-AUX 1/AUX 2
Connects to the analogue audio output on the TV or an analogue device.

⑤ LAN
Connects to the LAN input on a broadband modem or router.

⑥ VIDEO OUT-VIDEO
Connects to the composite video input on the TV.

⑦ VIDEO OUT-Y Pb Pr
Connects to the component video input on the TV.

⑧ FM ANTENNA FM 75 Ω
Connects the FM antenna for radio reception.

⑨ HDMI OUT
Connects to the HDMI input on the TV.

⑩ DOCK for iPod
Connects to a Philips Dock for iPod/iPhone. (Sold separately.)

⑪ WIRELESS REAR AUDIO
Connects to a Philips wireless module.(Sold separately.)

Connect to the TV

Connect your home theatre directly to a TV through one of the following connectors (from highest to basic quality video):

① HDMI
② Component video
③ Composite video

Option 1: Connect to the TV through HDMI

Note

- If the HDTV has a DVI connector, connect using an HDMI/DVI adapter.
- If the TV supports EasyLink HDMI CEC, control the home theatre and TV with one remote control (see 'Use Philips EasyLink' on page 17).

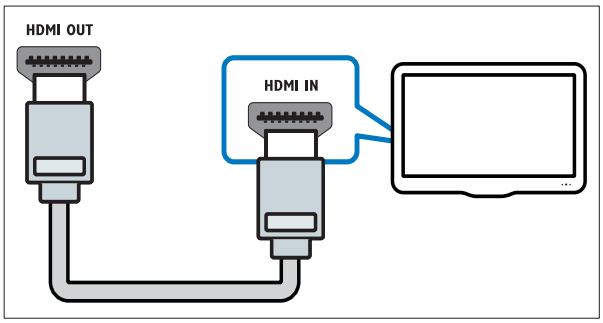

Option 2: Connect to the TV through YPbPr (component video)

Note

- The component video cable or connector might be labelled **Y Cb Cr** or **YUV**.

(Cable not supplied)

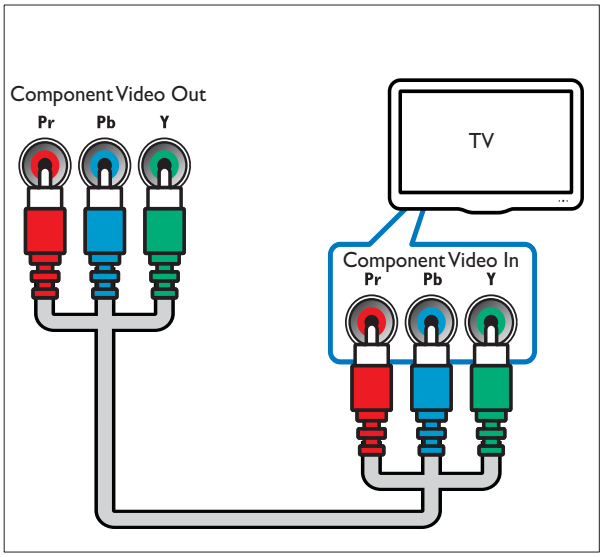

Option 3: Connect to the TV through composite video (CVBS)

Note

- The composite video cable or connector might be labelled **AV IN**, **VIDEO IN**, **COMPOSITE** or **BASEBAND**.

(Cable not supplied)

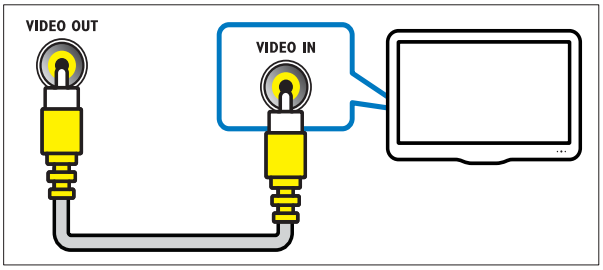

Connect audio from TV or other devices

Use your home theatre to play audio from the TV or other devices such as a cable box.

Tip

- Press **AUDIO SOURCE** repeatedly to select the audio output of your connection.

Option 1: Connect audio through analogue audio cables

(Cable not supplied)

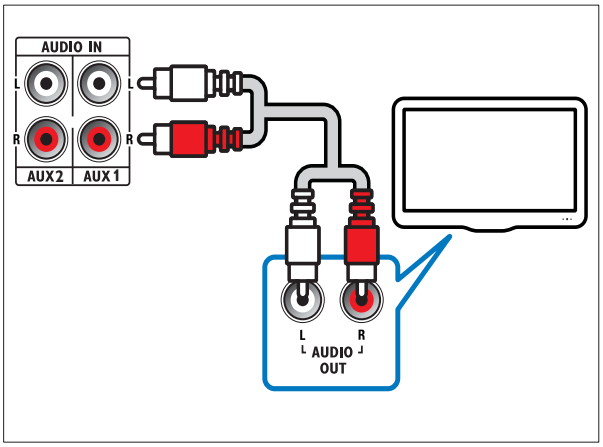

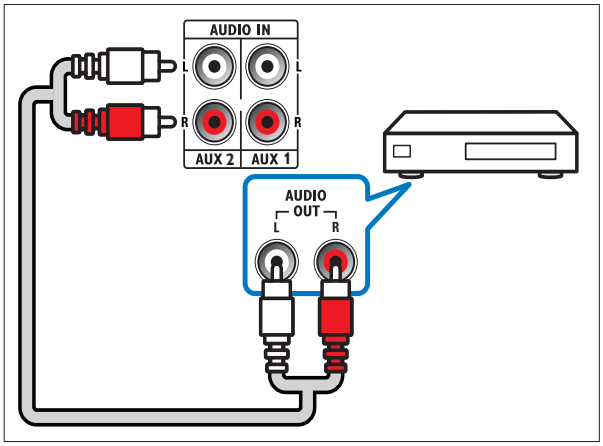

Option 2: Connect audio through coaxial cable

Note

- The digital coaxial cable or connector might be labelled **COAXIAL/DIGITAL OUT** or **SPDIF OUT**.

(Cable not supplied)

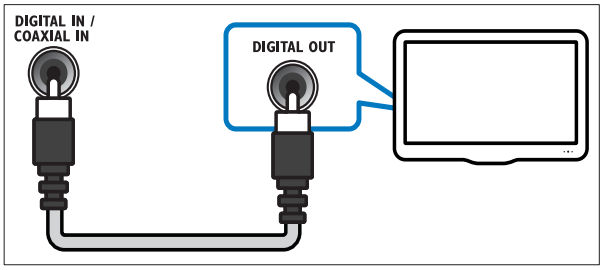

Connect a wireless module

Note

- When a wireless module is connected and switched on, the rear speakers of the home theatre will be muted and the rear surround sound output to the wireless surround speakers.

(Wireless module not supplied)

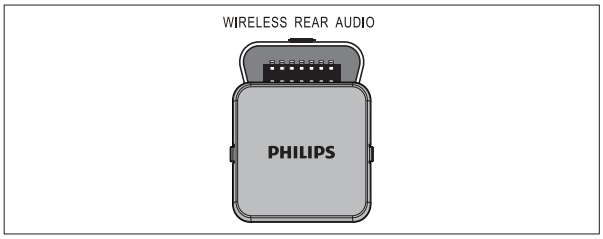

Connect to a computer network and the Internet

Connect the home theatre to a computer network and enjoy:

- **Multimedia content streamed from your computer:** view photos, play music and watch video files streamed from your computer (see 'Play from PC (DLNA Network Link)' on page 15).
- **BD-Live applications:** access to some exclusive services from the BD-Live-enabled Blu-ray discs (see 'Access BD-Live on Blu-ray' on page 13).
- **Software update:** update the software of the home theatre through the network (see 'Update software from the network' on page 20).

What you need:

- A network router (with DHCP enabled).
- A network cable (RJ45 straight cable).
- A computer with media server software installed (see 'Set up media server software' on page 15). The computer must be connected to the network router via a wired or wireless network connection.
- For BD-Live application and software updates, make sure that the network router has access to the Internet and is not restricted by firewalls or other security systems.

Caution

- Familiarise yourself with the network router, media server software and networking principles before attempting to connect the home theatre to a computer network. If necessary, read documentation accompanying network components. Philips is not responsible for lost, damaged or corrupt data.

(Cable not supplied)

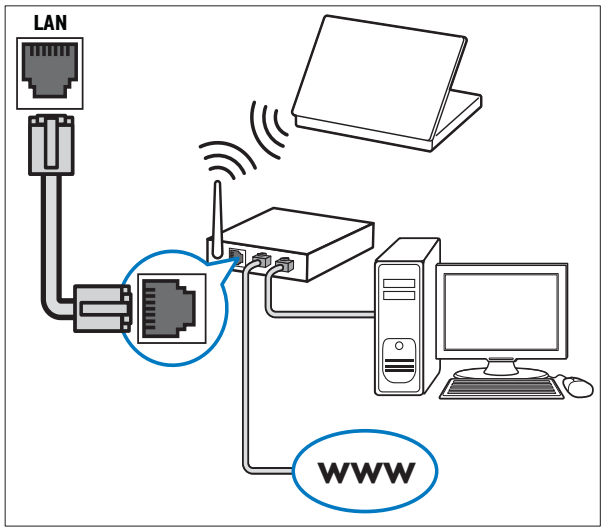

5 Use your home theatre

This section helps you use the home theatre to play media from a wide range of sources.

Before you start

Make sure that you:

- Make the necessary connections and complete the setup as described in the Quick Start.
- Switch the TV to the correct source for the home theatre.

Access the home menu

The home menu gives you easy access to connected devices, audio and video settings and other features.

1 Press ⌂ (**Home**).
   ↳ The home menu appears.

2 Press the **Navigation buttons** and **OK** to select the following:
   - **[play disc]** : Starts disc play.
   - **[Browse USB]** : Accesses the content browser of the connected USB storage device.
   - **[Browse iPod]** : Accesses the content browser of the connected iPod or iPhone.
   - **[Browse PC]** : Accesses the content browser of the connected PC network.
   - **[Setup]** : Accesses menus to change picture, sound and other settings.

Choose your sound

This section helps you choose the ideal sound for your video or music.

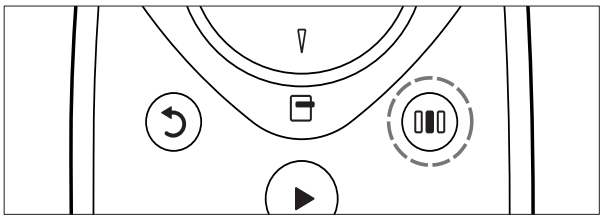

1 Press ||| (**Sound options**).
2 Press the **Navigation buttons** (left/right) to access the sound options.

Sound experience	Description
AUTO VOLUME	Sets a constant output signal at the speaker output. This option is best for TV audio input where the commercial signal level is usually higher than the content.
SOUND	Selects a sound mode.
SURROUND	Selects a surround sound or stereo sound.
TREBLE	Adjusts the high frequency output.
MID	Adjusts the middle frequency output.
BASS	Adjusts the low frequency output.
AUDIO SYNC	Delays the audio to match the video.

3 Select an option, then press **OK**.
4 Press ↩ (**Back**) to exit.
   If you do not press a button within five seconds, it automatically exits the menu.

Change auto volume

Select the level of volume output from your TV or other devices to the home theatre.

1 Press ||| (**Sound options**).
2 Select **AUTO VOLUME**, then press **OK**.
3 Press the **Navigation buttons** (up/down) to select **ON** or **OFF**.
4 Press **OK** to confirm your choice.

English

Change sound mode

Select predefined sound modes to suit your video or music.

1 Press (**Sound options**).
2 Select **SOUND**, then press **OK**.
3 Press the **Navigation buttons** (up/down) to select the following settings:
   - **ACTION/ROCK** : Enhanced low and high-range. Ideal for action movies and rock or pop music.
   - **DRAMA/JAZZ** : Clear mid and high-range. Ideal for drama movies and jazz music.
   - **CONCERT/CLASSIC** : Neutral sound. Ideal for live concerts and classical music.
   - **SPORTS** : Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sports venue.
   - **NIGHT** : Dynamically controlled sound mode suitable for watching movies at night or for non-intrusive background music.
4 Press **OK** to confirm your choice.

Change surround sound mode

Experience an immersive audio experience with surround sound modes.

1 Press (**Sound options**).
2 Select **SURROUND**, then press **OK**.
3 Press the **Navigation buttons** (up/down) to select the following settings:
   - **5CH STEREO** : Enhances the stereo channel output by duplicating the sound output to the centre and rear speakers. Ideal for party music.
   - **MULTI-CHANNEL/DPL II** : Immersive multi-channel sound for an enhanced movie experience.
   - **STEREO** : Two-channel stereo sound. Ideal for listening to music.
4 Press **OK** to confirm your choice.

Change treble, mid and bass

Change the high frequency (treble), mid frequency (mid) and low frequency (bass) settings of the home theatre to suit your video or music.

1 Press (**Sound options**).
2 Select **TREBLE**, **MID** or **BASS**, then press **OK**.
3 Press the **Navigation buttons** (up/down) to adjust the frequency level.
4 Press **OK** to confirm.

Synchronise audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

1 Press (**Sound options**).
2 Select **AUDIO SYNC**, then press **OK**.
3 Press the **Navigation buttons** (up/down) to sync the audio with the video.
4 Press **OK** to confirm.

Play a disc

The home theatre can play a wide variety of discs, including video, audio and mixed media (for example, a CD-R that contains JPEG pictures and MP3 music).

1 Insert a disc into the home theatre.
2 Press **DISC**, or select **[play disc]** in the home menu and press **OK**.
   ↳ The disc plays or the disc main menu appears.
3 Press the following buttons to control play:

Button	Action
Navigation buttons	Navigate menus.
OK	Confirms an entry or selection.
▶ (**Play**)	Starts or resumes play.
⏸	Pauses play.
■	Stops play.
⏮ / ⏭	Skips to the previous or next track, chapter or file.
◀◀ / ▶▶	Fast backwards or fast forwards. Press repeatedly to change the search speed. In pause mode, steps forward by one frame.
▲/▼	Rotates the picture anti-clockwise or clockwise.
SUBTITLE	Selects subtitle language for video.
(**Disc menu**)	Accesses or exits the disc menu.
(**Options**)	Accesses more play options during playback.

Use Bonus View on Blu-ray

Blu-ray discs that support the Bonus View feature (also known as Picture-In-Picture) allow you to view special content such as a director's commentary while watching the main feature.

1. If necessary, enable BonusView (or Picture-In-Picture) in the Blu-ray disc menu.
2. During playback of the main feature, press ☐ (**Options**).
   ↳ The options menu is displayed.
3. Select **[PIP Selection]** > **[PIP]**, then press **OK**.
   ↳ PIP options [1]/[2] depend on the video contents.
   ↳ The picture-in-picture video appears in a small window.
4. Select **[2nd Audio Language]** or **[2nd Subtitle Language]**, then press **OK**.
5. Select the language to play, then press **OK**.

Note

- To turn off the Bonus View (Picture-in-Picture), press ☐ (**Options**), select **[PIP Selection]** > **[Off]**, then press **OK**.

Access BD-Live on Blu-ray

BD-Live-enabled Blu-ray discs include exclusive services such as movies and other online bonuses.

Set up network

1. Connect the home theatre to a broadband modem or router.
2. Turn on your TV and switch to the correct source for the home theatre.
3. Press ⌂ (**Home**).
4. Select **[Setup]**, then press **OK**.
5. Select **[Network Setup]** > **[Network Installation]**, then press **OK**.
6. Select **[Wired (Ethernet)]**, then press **OK**.
7. Select **[Auto Setup]** or **[Manual Setup]**, then press **OK**.
8. Follow the instructions on the TV to complete the setup.
   ↳ The home theatre connects to the Internet. If connection fails, select **[Retry]**, then press **OK**.
9. Select **[Finish]**, then press **OK** to exit.

Use BD-Live

1. Before using BD-Live, ensure that the home theatre is connected to the Internet and that network access is properly set up.
2. Connect the USB storage device to the home theatre.
3. Select the BD-Live icon in the disc menu, then press **OK**.
   ↳ BD-Live starts to load. The loading time depends on the disc and your Internet connection.
4. Press the **Navigation buttons** to navigate BD-Live.
5. Press **OK** to select an item.

Note

- The range of BD-Live services depends on the disc.
- When you use BD-Live, data on the disc and home theatre are accessed by the content provider.
- Use a USB storage device with at least 1 GB of free space to store the downloaded files.
- If there is insufficient memory to download BD-Live content, clear local storage space.

Play from a USB storage device

The home theatre is fitted with a USB connector that allows you to view pictures, listen to music or watch movies stored on a USB storage device.

1. Connect the USB storage device to the home theatre.
2. Press ⌂ (**Home**).
   ↳ The home menu appears.
3. Select **[Browse USB]**, then press **OK**.
   ↳ A content browser appears.
4. Select a file, then press **OK**.
5. Press the playback buttons to control play (see 'Play a disc' on page 12).

Note

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theatre does not support digital cameras that need a computer program to display photos.
- The USB storage device must be FAT or DOS-formatted, and Mass Storage Class compliant.

More play features for disc or USB

Several advanced features are available for video or picture playback from a disc or USB storage device.

Use video options

Access several useful features while viewing video.

Note

- Available video options depend on the video source.

1 Press ☐ (**Options**).
   ↳ The video options menu appears.

2 Press the **Navigation buttons** and **OK** to select and adjust:
   - **[Audio Language]** : Selects audio language for video.
   - **[Subtitle Language]** : Selects subtitle language for video.
   - **[Subtitle Shift]** : Adjusts the subtitle position on the screen.
   - **[Info]** : Displays information about what is playing.
   - **[Character Set]** : Selects a character set that supports the DivX subtitle.
   - **[Time Search]** : Skips to a specific part of the video by entering the time of the scene.
   - **[2nd Audio Language]** : Selects the second audio language to play.
   - **[2nd Subtitle Language]** : Selects the second subtitle language to play.
   - **[Titles]** : Selects a specific title.
   - **[Chapters]** : Selects a specific chapter.
   - **[Angle List]** : Selects a different camera angle.
   - **[Menus]** : Displays the disc menu.
   - **[PIP Selection]** : Displays Picture-in-Picture window.
   - **[Zoom]** : Zooms into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
   - **[Repeat]** : Repeats a chapter or title.
   - **[Repeat A-B]** : Marks two points within a chapter or track for repeat play, or turns off repeat mode.
   - **[Picture Settings]** : Selects a predefined colour setting.

Note

- Subtitle shift is only available if the **[TV Display]** setting of the home theatre is set to **[21:9 Cinema]** and the TV supports this feature.

Use picture options

Access several useful features while viewing pictures.

1 Press ☐ (**Options**).
   ↳ The pictures options menu appears.

2 Press the **Navigation buttons** and **OK** to select and adjust:
   - **[Rotate +90]** : Rotates the picture 90 degrees clockwise.
   - **[Rotate -90]** : Rotates the picture 90 degrees anti-clockwise.
   - **[Zoom]** : Zooms into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
   - **[Info]** : Displays picture information.
   - **[Duration per slide]** : Sets the display speed for each picture in a slide show.
   - **[Slide Animation]** : Selects animation for the slide show.
   - **[Picture Settings]** : Selects a predefined colour setting.

Use audio options

Access several useful features while audio is played.

1 Press ☐ (**Options**) repeatedly to cycle through the following functions:
   - **REPEAT TRACK** : Repeats the current track.
   - **REPEAT DISC** : Repeats all the tracks on the disc or folder.
   - **REPEAT RANDOM** : Plays audio tracks in random order.
   - **REPEAT OFF** : Turns off repeat mode.

Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow.

1 Select a music track, then press **OK**.
2 Press ↩ (**Back**) and go to the picture folder.
3 Select a picture, then press **OK** to start slideshow.
4 Press ■ to stop slideshow.
5 Press ■ again to stop music.

Play from PC (DLNA Network Link)

(For HTS5580 and HTS5590 only.)

The home theater is Digital Living Network Alliance (DLNA) certified. It allows you to listen to music, view photo files and watch video files that are stored on your computer through the home theater.

Set up media server software

Your computer must be installed with media server software that is configured for media sharing. For more information, see the instructions for the media server software.

1 Connect the home theatre to a network router.
2 Switch on the computer and router.
3 Open Windows Media Player on the computer.
4 Select **[Library]** > **[Media Sharing]**, then select settings to share your media.
5 Select **[Library]** > **[Add to Library]**, then select settings to share the folder containing your media.
6 Select **[Library]** > **[Apply Media Information Changes]** to activate the changes.

Play multimedia content

(For HTS5580 and HTS5590 only.)

Note

- Before playing multimedia content from the computer, ensure that the home theatre is connected to the computer network and the media server software is properly set up.

1 Press ⌂ (**Home**).
↳ The home menu appears.
2 Select **[Browse PC]**, then press **OK**.
↳ A content browser appears.
3 Select a file, then press **OK**.
4 Press the playback buttons to control play (see 'Play a disc' on page 12).

Play from radio

The home theatre can store up to 40 radio stations.

1 Check that the FM antenna is connected.
2 Press **RADIO**.
↳ "**AUTO INSTALL...PRESS PLAY**' appears on the display panel if you have not installed any radio stations. Press ▶ (**Play**).
3 Press the following buttons to control play:

Button	Action
⏮ / ⏭	Selects a preset radio station.
Navigation buttons (left/right)	Searches for a radio station.
▲▼	Fine tunes a radio frequency.
■	Press and hold to erase the preset radio station. Press to stop the installation of radio stations.
(**Options**)	Manual: Press once to access programme mode, and press again to store the radio station. Automatic: Press and hold for five seconds to reinstall radio stations.
RADIO	Toggles between stereo and mono sound.

Note

- AM and digital radio are not supported.
- If no stereo signal is detected, or if fewer than five stations are found, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Play audio from TV or other devices

Press **AUDIO SOURCE** repeatedly to select the audio output of the connected device.

Play from an MP3 player

Connect and play audio files from an MP3 player or other external audio devices.

1. Connect the MP3 player to the home theatre.
2. Press **AUDIO SOURCE** repeatedly until '**MP3 LINK**' appears on the display panel.
3. Press the buttons on the MP3 player to select and play audio files.

Play from an iPod or iPhone

By connecting and installing a Philips Dock for iPod/iPhone, you can use the home theatre to play music, movies and photos from your iPod or iPhone.

Note

- Philips Dock for iPod/iPhone is sold separately.
- You can charge your iPod/iPhone on the dock while the home theatre is in iPod mode.

Dock your iPod or iPhone

1. Connect the dock to the home theatre and connect the yellow composite cable from the dock to the TV. For more information, see the Quick Start provided with the dock.
2. Switch on the iPod or iPhone and place it in the dock.
3. On the home theatre remote control, press ⌂ (**Home**), then select **[Browse iPod]** and press **OK**.

Listen to music

1. Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 16).
2. Press **DOCK for iPod** on the home theatre remote control.
   ↳ The playlists are displayed on the TV.
3. Press the **Navigation buttons** and **OK** to select and play tracks.

Watch video or view slideshows

Note

- On iPod, enable the TV ON setting.
- On iPhone, select the TV Out option.

1. Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 16).
2. Switch the TV to the **AV/VIDEO** source (corresponding to the yellow composite cable).
   ↳ The TV screen goes blank.
3. Browse on the iPod or iPhone screen to select videos or photos.
4. Press ▶ (**Play**) to play the video and photos.
   ↳ The picture is displayed on the TV.

Use Philips EasyLink

The home theatre supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

1 Switch on the HDMI CEC operations on the TV and other connected devices. See the manual of the TV or other devices for details.
2 Press ⌂ (**Home**).
3 Select **[Setup]**, then press **OK**.
4 Select **[EasyLink Setup]** > **[EasyLink]**, then press **OK**.
5 Select **[On]**, then press **OK**.
6 You can now enjoy the following Philips EasyLink controls.

One-touch play
When you play a disc, the TV automatically switches to the correct channel.

One-touch standby
When you press and hold ⏻ (**Standby**) on the remote control, the home theatre and all the connected HDMI CEC devices (if they support one-touch standby) switch to standby mode simultaneously.

System Audio Control
When you play a device that has its audio output routed to the home theatre, the home theatre switches to the corresponding audio source automatically.
To use one-touch audio, enable this feature and follow the instructions on the TV to map the connected devices correctly to the audio input jacks of the home theatre.

Audio Input Mapping
Updates audio input mapping if there are new devices connected.

6 Change settings

This section helps you to change the settings of your home theatre.

Caution

- Many of the settings are already configured with the best value for the home theatre. Unless you have a specific reason to change a setting, it is best to leave it at the default value.

Access the setup menu

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
↳ The setup menu appears.
3 Select a setup menu, then press **OK**.
See the following sections for information about how to change the settings of your home theatre.
4 Press ↩ (**Back**) to return to the previous menu, or press ⌂ to exit.

Note

- You cannot change a setting that is greyed out.

Change video settings

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
3 Select **[Video Setup]**, then press **OK**.
4 Select and adjust the following settings:
- **[TV Display]** : Selects a picture display format to fit the TV screen.
- **[HDMI Video]** : Selects the HDMI video resolution.
- **[HDMI Deep Colour]** : Displays colours with more shades and hues when the video content is recorded in Deep Color and the TV supports this feature.

English

- **[Component Video]** : Selects the component video resolution. Copy-protected DVDs can display only 480p/576p or 480i/576i.
- **[Picture Settings]** : Selects a predefined colour setting.

5 Press **OK** to confirm your choice.

Note

- The best setting is automatically selected for the TV. If you need to change the setting, ensure that the TV supports the new setting.
- For settings related to HDMI, the TV must be connected through HDMI.
- For settings related to progressive or component video, the TV must be connected through Component Video.

Change audio settings

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
3 Select **[Audio Setup]**, then press **OK**.
4 Select and adjust the following settings:
- **[Night Mode]** : Selects quiet or full dynamic sound. Night mode decreases the volume of loud sounds and increases the volume of soft sounds such as speech.
- **[HDMI Audio]** : Selects HDMI audio format or disables HDMI audio output for the TV.
- **[Speaker Setup]** : Sets the volume level and distance of each speaker to obtain the best possible surround sound based on your room setup.

5 Press **OK** to confirm your choice.

Note

- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is available for Dolby encoded DVD and Blu-ray discs (for models that support Blu-ray playback).

Set up network

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
3 Select **[Network Setup]**, then press **OK**.
4 Select and adjust the following settings:
- **[Network Installation]** : Starts wired (Ethernet) or wireless setup. Follow the instructions to set up the network connection.
- **[View Network Settings]** : Displays the current network settings.

5 Press **OK** to confirm your choice.

Set up EasyLink

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
3 Select **[EasyLink Setup]**, then press **OK**.
4 Select and adjust the following settings:
- **[EasyLink]** : Enables or disables EasyLink.
- **[One Touch Play]** : Enables or disables One Touch Play.

  If enabled, you can use the remote control to start disc play in the home theatre and the TV switches automatically to the correct channel.
- **[One Touch Standby]** : Enables or disables One Touch Standby.

  If enabled, the home theatre can be switched to standby by a remote control from the TV or other connected HDMI CEC devices.
- **[System Audio Control]** : Enables or disables System audio control.

  If enabled, follow the instructions on the TV to map the connected devices correctly to the audio connectors of the home theatre. The home theatre switches automatically to the audio source of the connected device.
- **[Audio Input Mapping]** : Updates audio input mapping if there are new devices connected.

5 Press **OK** to confirm your choice.

Note

- The connected devices must be connected through HDMI and switched on.

Change preference settings

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
3 Select **[Preference Setup]**, then press **OK**.
4 Select and adjust the following settings:
   - **[Menu language]** : Selects the on-screen display menu language.
   - **[Audio]** : Selects audio language for video.
   - **[Subtitle]** : Selects subtitle language for video.
   - **[Disc Menu]** : Selects menu language for video disc.
   - **[Parental Control]** : Restricts access to discs that are recorded with ratings. To play all discs irrespective of the rating, select level '8'.
   - **[Screen Saver]** : Enables or disables screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
   - **[Auto Subtitle Shift]** : Enables or disables shift subtitle. If enabled, it adjusts the subtitle position automatically to fit the TV screen.
   - **[Change Password]** : Sets or changes a PIN code to play a restricted disc. Enter '**0000**' if you do not have a PIN or if you have forgotten your PIN.
   - **[Display Panel]** : Changes the brightness of the display panel.
   - **[Auto Standby]** : Enables or disables auto standby. If enabled, the home theatre switches to standby after 30 minutes of inactivity (for example, in pause or stop mode).
   - **[VCD PBC]** : Displays or skips the content menu for VCD and SVCD discs.
   - **[Sleep Timer]** : Sets a sleep timer to switch the home theatre to standby after a specific time.
5 Press **OK** to confirm your choice.

Note

- If you select a language that is not available on a disc, the home theatre uses the default language of the disc.
- Subtitle shift is only available if the **[TV Display]** setting of the home theatre is set to **[21:9 Cinema]** and the TV supports this feature.

Change advanced settings

1 Press ⌂ (**Home**).
2 Select **[Setup]**, then press **OK**.
3 Select **[Advanced Setup]**, then press **OK**.
4 Select and adjust the following settings:
   - **[BD-Live Security]** : Restricts or allows access to BD-Live.
   - **[Enhanced Audio]** : Enables or disables the audio post processing at the speaker output.
   - **[Software Update]** : Selects to update software from the network or from a USB storage device.
   - **[Clear memory]** : Clears local memory, deletes the BD-Live files that you previously downloaded. If using a USB storage device, the local storage folder is 'BUDA'.
   - **[DivX® VOD Code]** : Displays the DivX VOD registration code for the home theatre.
   - **[Version Info.]** : Displays the software version for the home theatre.
   - **[Restore default settings]** : Resets the home theatre to the default settings programmed at the factory.
5 Press **OK** to confirm your choice.

Note

- You cannot restrict Internet access on commercial Blu-ray discs.
- Before you purchase DivX videos and play them on the home theatre, register the home theatre on www.divx.com using the DivX VOD code.
- You cannot reset the parental control setting to its default value.

7 Update software

To check for new updates, compare the current software version of your home theatre with the latest software version (if available) on the Philips website.

Check software version

1. Press ⌂ (**Home**).
2. Select **[Setup]**, then press **OK**.
3. Select **[Advanced Setup]** > **[Version Info.]**, then press **OK**.
   ↳ The software version is displayed.

Update software from the network

1. Prepare the Internet connection.
2. Press ⌂ (**Home**) and select **[Setup]**.
3. Select **[Advanced Setup]** > **[Software Update]** > **[Network Setup]**.
   ↳ If upgrade media is detected, you are prompted to start or cancel the update.
4. Follow the instruction on the TV to confirm the update.
   ↳ When complete, the home theatre automatically switches off and on again.
   - If not, disconnect the power cord for a few seconds and then reconnect it.

Note

- If the home theatre is unable to connect to the Philips server, press ⌂ (**Home**) and select **[Setup]** > **[Network Setup]** > **[Network Installation]** to set up the network.

Update software from a USB device

1. Check for the latest software version on www.philips.com/support.
   - Search for your model and click on 'software&drivers'.
2. Create a folder named 'UPG' on your USB storage device.
3. Download the software into the 'UPG' folder.
4. Unzip the software in the 'UPG' folder.
5. Connect the USB storage device to the home theatre.
6. Press ⌂ (**Home**) and select **[Setup]**.
7. Select **[Advanced Setup]** > **[Software Update]** > **[USB]**.
8. Follow the instructions on the TV to confirm the update.
   ↳ When complete, the home theatre automatically switches off and on again.
   - If not, disconnect the power cord for a few seconds and then reconnect it.

Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage the home theatre.

8 Product specifications

Note

- Specification and design are subject to change without notice.

Region code

The type plate on the back or bottom of the home theatre shows which regions it supports

Country	DVD	BD
Europe, United Kingdom	ALL 2	B
Asia Pacific, Taiwan, Korea	ALL 3	A
Latin America	ALL 4	A
Australia, New Zealand	ALL 4	B
Russia, India	ALL 5	C
China	ALL 6	C

Playback media

- AVCHD, BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/ SVCD, Picture CD, MP3-CD, WMA-CD, DivX (Ultra)-CD, USB storage device

File Format

- Audio: .mp3, .wma, .wav
- Video: .avi, .divx, .mp4, .mkv, .mov, .wmv
- Picture: .jpg, .gif, .png

Amplifier

- Total output power: 1000 W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz/±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR)/ (A-weighted)
- Input sensitivity:
  - AUX: 900 mV
  - MP3 LINK: 500 mV

Video

- Signal system: PAL/NTSC
- Component video output: 480i/576i, 480p/576p, 720p, 1080i
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 112 kbps - 320 kbps
  - WMA: 48 kbps - 192 kbps

Radio

- Tuning range: FM 87.5-108 MHz (50 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-12.5 kHz / ±3 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT16, FAT32
- Maximum memory support: < 160 GB.

Main Unit

- Power supply: 220-240V; ~50 Hz
- Power consumption: 135 W
- Standby power consumption: < 0.9 W
- Dimensions (W x H x D): 435 x 58 x 358 (mm)
- Weight: 3.87 kg

Subwoofer

- Impedance: 3 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 40 Hz-150 Hz
- Dimensions (WxHxD): 196 x 395 x 342 (mm)
- Weight: 5.25 kg
- Cable length: 4 m

Speakers

- System: full range satellite
- Speaker impedance: 3 ohm (centre), 5 ohm (Front/Rear)
- Speaker drivers: 2 x 3" full range
- Frequency response: 150 Hz-20 kHz
- Dimensions (W x H x D):
  - Centre: 280 x 95 x 92 (mm)
  - Speaker: 100 x 280 x 115 (mm)
  - Tall speaker: 260 x 1101 x 260 (mm)
- Weight:
  - Centre: 1.40 kg
  - Speaker: 0.98–1.05 kg/each
  - Tall speaker: 3.73–3.81 kg/each
- Cable length:
  - Centre: 3 m
  - Front: 4 m
  - Rear: 10 m

Laser Specification

- Laser Type (Diode): InGaN/AlGaN (BD), InGaAlP (DVD), A lGaAs (CD)
- Wave length: 405 +5 nm/-5 nm (BD), 650 +13 nm/-10 nm (DVD), 790 +15 nm/-15 nm (CD)
- Output power (Max. ratings): 20 mW (BD), 7 mW (DVD/CD)

9 Troubleshooting

Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No. _____

Serial No. _____

Main unit

The buttons on this home theatre do not work.

- Disconnect the home theatre from the socket for a few minutes, then reconnect.

Picture

No picture.

- Ensure that the TV is switched to the correct source for the home theatre.

No picture on HDMI connection.

- Change the HDMI video setting or wait for 15 seconds for auto recover.
- Check whether the HDMI cable is faulty. Replace with a new HDMI cable.

No picture on the Component (Y Pb Pr) connection.

- If the HDMI video connection is set to **[Auto]** or **[1080p/24Hz]**, there is no video output through the component connection. Change the HDMI video setting or remove the HDMI connection.

No high-definition video signal on the TV.

- Ensure that the disc contains high-definition video.
- Ensure that the TV supports high-definition video.

Sound

No sound.

- Ensure that the audio cables are connected and select the correct input source (for example, **AUDIO SOURCE**) for the device you want to play.

No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (High-bandwidth Digital Content Protection) compliant or only DVI compatible. Use an analogue or digital audio connection.
- Ensure that the **[HDMI Audio]** is enabled.

No sound from TV programme.

- Connect an audio cable from the audio input on the home theatre to the audio output on the TV, then press **AUDIO SOURCE** repeatedly to select the correct audio source.

Distorted sound or echo.

- Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theatre.

Audio and video are not synchronised.

- 1) Press (**Sound options**). 2) Press the **Navigation buttons** (left/right) repeatedly until **AUDIO SYNC** is displayed, then press **OK**. 3) Press the **Navigation buttons** (up/down) to sync the audio with the video.

Play

Disc cannot be played.

- Clean the disc.
- Ensure that the home theatre supports the disc (see 'Product specifications' on page 21).
- Ensure that the home theatre supports the region code of the disc.
- For DVD±RW or DVD±R, ensure that the disc is finalised.

DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theatre Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

DivX subtitles do not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set: 1) Press (**Options**). 2) Select **[Character Set]**. 3) Select the supported character set. 4) Press **OK**.

The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theatre.
- Ensure that the USB storage device is formatted with a file system that is supported by the home theatre (note that NTFS is not supported).

'No entry' or 'x' sign appears on the TV.

- The operation is not possible.

EasyLink feature does not work.

- Ensure that the home theatre is connected to a Philips brand EasyLink TV and that EasyLink is on.

I do not want my home theatre to be switched on when I switch on my TV.

- This is the correct behaviour for Philips EasyLink (HDMI-CEC). To make the home theatre work independently, switch off EasyLink.

I cannot access BD-Live features.

- Check the network connection or ensure that the network has been set up (see 'Set up network' on page 13).
- Clear memory storage. (see 'Change advanced settings' on page 19)
- Ensure that the Blu-ray disc supports BD-Live features.

The video (movies, photos, video clips etc.) contents of the iPod/iPhone do not display on TV.

- Video and photo browsing is not supported; you can only browse the video and photo contents on the iPod/iPhone itself.

Cannot see pictures from my iPod/iPhone on the TV.

- Connect a yellow composite cable from the dock to the TV.
- Switch the TV to the **AV/VIDEO** source (corresponding to the yellow composite cable).
- Press **PLAY** on the iPod or iPhone to start the slideshow.

10 Index

A

amplifier 21
audio
- connection 9
- language 19
- settings 18
- synchronise with video 12

audio input mapping 17, 18

B

BD-Live
- access 13
- set up 13

Bonus View 13

C

care 4
change settings 17
chapter 14
connect
- audio from TV 9, 16
- guide 7
- network 10
- other devices 9
- TV 8
- wireless module 9

connectors 7
contact us 22

D

disc
- play 12
- supported discs 21

disposal of your product 5
DivX
- character set 14

E

EasyLink
- settings 17, 18

F

file formats 21

H

HDMI CEC (see Easylink) 17

I

Internet
- BD-Live 13
- connect 10
- software update 20

iPod
- play 16

L

language
- audio 14, 19
- disc menu 19
- on-screen display 19
- subtitle 14, 19

M

media server software
- set up 15

MP3
- play 16

N

network
- connect 10
- set up 13
- software update 20

O

one-touch play 17, 18
one-touch standby 17, 18
overview
- connectors 7
- main unit 5
- remote control 6

P

password (PIN code) 19
picture
- options 14
- rotate 14
- slide show 15, 14
- troubleshooting 22

picture-in-picture
- 2nd audio language 13
- 2nd subtitle language 13
- enable 13

play
- disc 12
- MP3 player 16
- multimedia content 15
- options 12
- radio 15
- troubleshooting 23
- USB storage device 13

product care 4
product specifications 21

R

radio
- play 15
- programme 15
- tune 15

recycle 5
region code 21
remote control 6
repeat 14, 12
rotate pictures 14

S

safety 4
settings
- audio 18
- EasyLink 18
- parental control 19
- preferences 19
- video 17

slideshow
- animation 14
- duration 14

software
- update 20
- version 20

sound
- auto volume 11
- mode 12
- surround 12
- treble and bass 12
- troubleshooting 23

subtitle
- language 14, 19

subtitle shift 14, 19
system audio control 17

T

time search video 14
title 14
troubleshooting 22
TV
- audio from TV 9, 16
- connect 8

U

USB
- play 13
- software update 20

V

video
- options 14
- settings 17
- synchronise with audio 12

English